



DOCUMENTATION

DENON MCX8000



- 1 - Cue Mode 1 (CM1)
- 2 - Cue Roll (shift + play)
- 3 - Sample Mode
- 4 - Play / Pause
- 5 - Cue
- 6 - Shift
- 7 - Sync
- 8 - Loop Controls
(Increase/Decrease)
- 9 - Performance Pads
- 10 - Scratching/Pitchbending
- 11 - Pitch Fader
- 12 - FX-Mode on/off (Flanger)
- 13 - FX Mode on/off (HP / LP)
- 14 - FX Mode on/off (RES)
- 15 - FX Mode on/off (HP / LP / RES)
- 16 - Channel Gain Control
- 17 - Channel EQ control (treble)
- 18 - Channel EQ control (mid)
- 19 - Channel EQ control (bass)

- 20 - HPF/LPF Dedicated channel HP/LP filter
- 21 - Load song to waitlist
- 22 - Cues selected channel for headphone monitoring
- 23 - Browser library scroll. Push to select file.
- 24 - Sampler Gain
- 25 - Channel linefader
- 26 - Crossfader Scratching
- 27 - Back Toggles focus between Library and Playlist
- 28 - Master Gain
- 29 - Headphone mix between Master/Cue
- 30 - Change View-Mode
- 31 - Autodj on / off
- 32 - Pitchbend + / -
- 33 - PC / LN switch
- 34 - Mic 1 / Mic 2 section
- 35 - switch views
- 36 - open file archive groups
- 37 - Vinyl mode on / off