

DOCUMENTATION

Numark NS6



- | | | | |
|-----------|---------------------------------|-----------|--------------------------------|
| 1 | Sync | 25 | Track Search |
| 2 | Cue | 26 | Bpm Tapper |
| 3 | Play | 27 | Adjust Cutoff+Resonance |
| 4 | Shift | 28 | Flanger On/Off |
| | (Hold to Delete Cues) | 29 | Adjust Flanger |
| 5 | Cue 1 | 30 | Adjust Booth Volume |
| 6 | Cue 2 | 31 | Previous View |
| 7 | Cue 3 | 32 | Navigate |
| 8 | Cue 4 | | Open Group (TAP) |
| 9 | Cue 5 | 33 | Next View |
| 10 | Pitch-Bend-Down | 34 | Adjust Master Volume |
| 11 | Pitch-Bend-Up | 35 | Go to Filetree |
| 12 | Pitch-Fader | 36 | Go to Waitlist |
| 13 | Scratching/Pitch-Bending | 37 | Go to Mainlist |
| 14 | Next Pitch-Range | 38 | Load Song on Left Deck |
| 15 | Switch Master/Tempo | 39 | Previewplayer |
| 16 | Reverse FX | 40 | Load Song on Right Deck |
| 17 | Switch Scratching/PB | 41 | Activate Cutoff |
| 18 | Loop In | 42 | Activate Resonance |
| | Loop Range 1 (Shift) | 43 | Channel Gain |
| 19 | Loop Out | 44 | High EQ |
| | Loop Range 2 (Shift) | 45 | Mid EQ |
| 20 | Loop Range 4 (Shift) | 46 | Low EQ |
| 21 | Loop Range 8 (Shift) | 47 | Monitor On/Off |
| 22 | Decrease Loop | 48 | Channel Fader |
| 23 | Increase Loop | 49 | Crossfader |
| 24 | Loop On/Off | | |