

DOCUMENTATION

Numark NV



- 1 Play
Cue-Play (Shift)
- 2 Cue
- 3 Sync Bpm
- 4 Shift (Hold to delete Cues)
- 5 Pitch-Bending/
Scratching
- 6 Pitch-Fader
- 7 Toggle between
Pitch-Bending/Scratching
- 8 Pitch-Bend-Down
- 9 Pitch-Bend-Up
- 10 Cue-Mode (CM)
- 11 Auto-Loop-Mode (AM)
- 12 Manual-Loop-Mode (MM)
- 13 Sample-Mode (SM)
- 14 Cue 1 (CM)
Auto-Loop 1 (AM)
Loop In (MM)
Sample 1 (SM)
- 15 Cue 2 (CM)
Auto-Loop 2 (AM)
Loop Out (MM)
Sample 2 (SM)
- 16 Cue 3 (CM)
Auto-Loop 4 (AM)
Loop On/Off (MM)
Sample 3 (SM)

- 17 Cue 4 (CM)
Auto-Loop 8 (AM)
Sample 4 (SM)
- 18 Cue 5 (CM)
Auto-Loop 16 (AM)
Sample 5 (SM)
- 19 Cue 6 (CM)
Auto-Loop 32 (AM)
Sample 6 (SM)
- 20 Cue 7 (CM)
Loop On/Off (AM)
Sample 7 (SM)
- 21 Cue 8 (CM)
Sample 8 (SM)
- 22 Flanger On/Off
Brake FX (Shift)
- 23 Adjust Flanger FX
- 24 Cutoff On/Off
Spin-Backward FX (Shift)
- 25 Adjust Cutoff FX
- 26 Resonance On/Off
Beatgrid-FX (Shift)

- 27 Adjust Resonance FX
- 28 Loop On/Off
- 29 Adjust Loop Length
Activate 4 Loop (TAP)
- 30 Next Pitch-Range
- 31 Tap
- 32 Load on Deck
Go to Waitlist (Shift)
- 33 Go to next view
Go to previous view (Shift)
- 34 Navigate/Open Group
- 35 Go To Main View
- 36 Cutoff On/Off
- 37 Resonance On/Off
- 38 Channel Gain
- 39 High EQ
- 40 Mid EQ
- 41 Low EQ
- 42 Adjust + Activate Cutoff
and Resonance
- 43 Monitor On/Off
- 44 Channel Fader
- 45 Crossfader